 




MÖBLER

 
- A PHILOSOPHY -

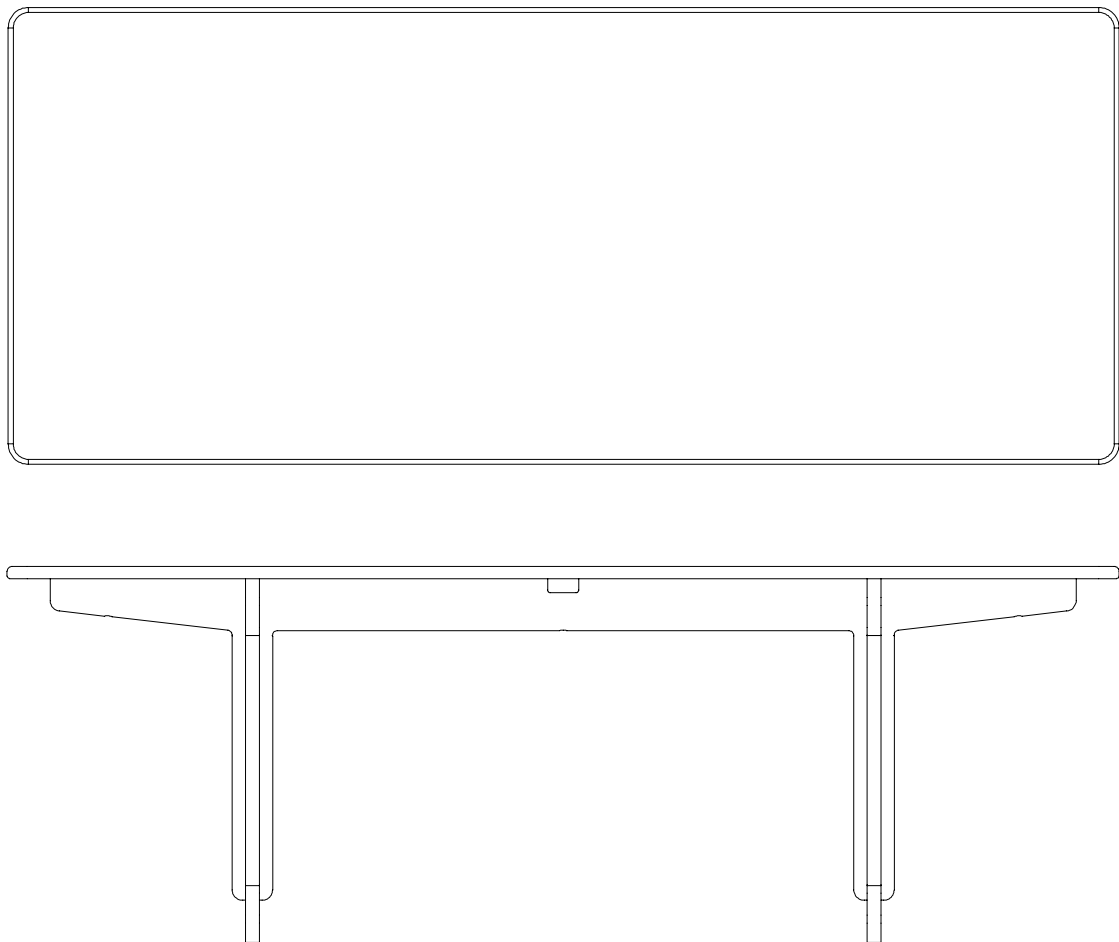

C64 Shaker, Massiv


Samlevejledning

Indhold

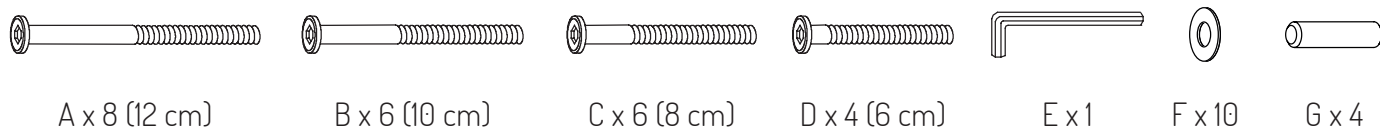


1

 Transport stabiliserende lister

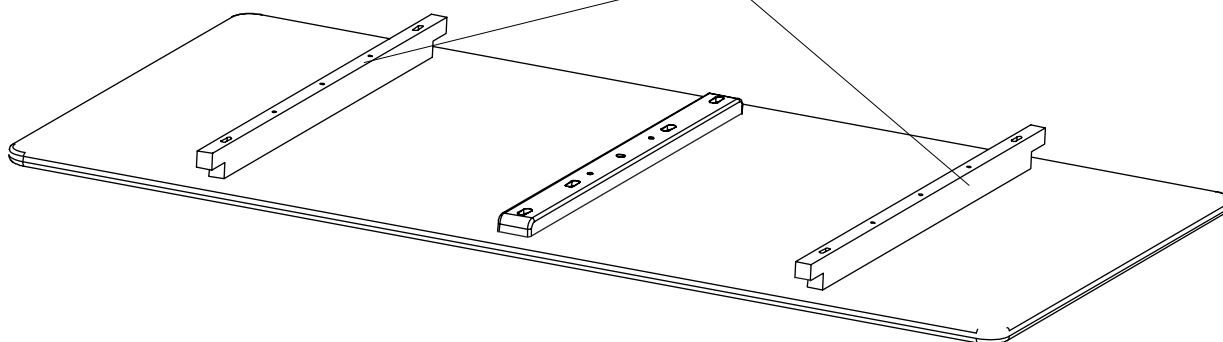

Fjern skrue(rne) (D) fra de transport stabiliserende lister på undersiden af bordpladen og flyt listerne væk fra bordet. Behold skrue(rne) til senere.

2

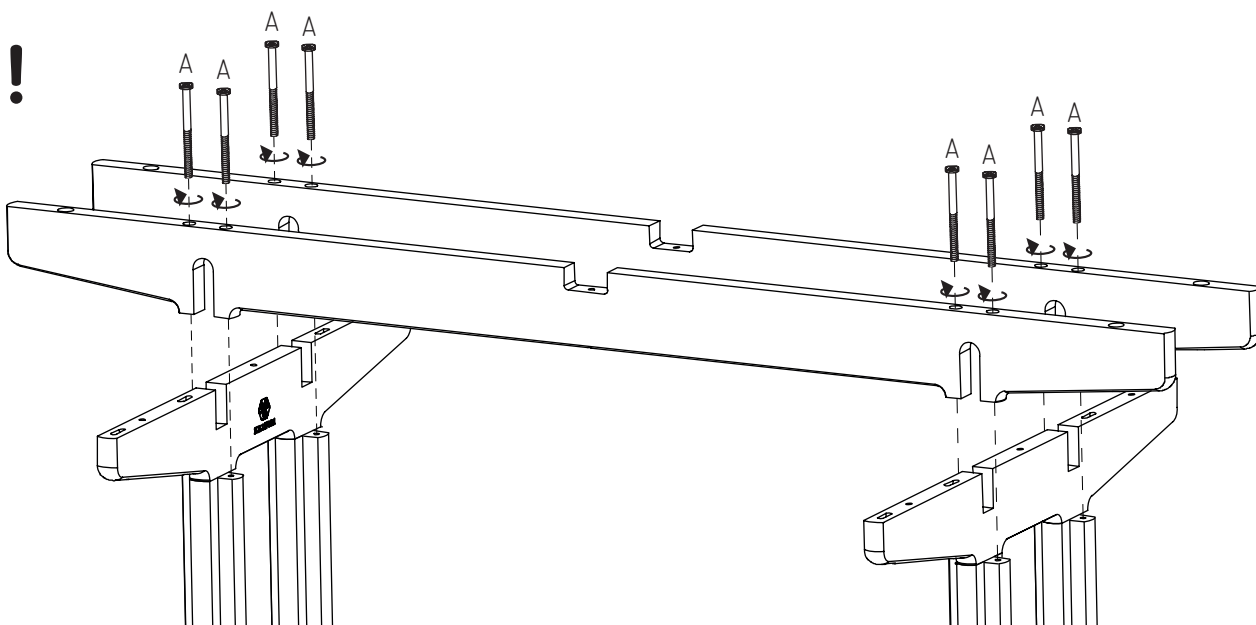


! OBS: Brugen af forkert længde skrue(r) forkerte steder vil ødelægge bordet. Vær derfor opmærksom, særligt ved brug af elværktøj.




MÖBLER

- A PHILOSOPHY -

3

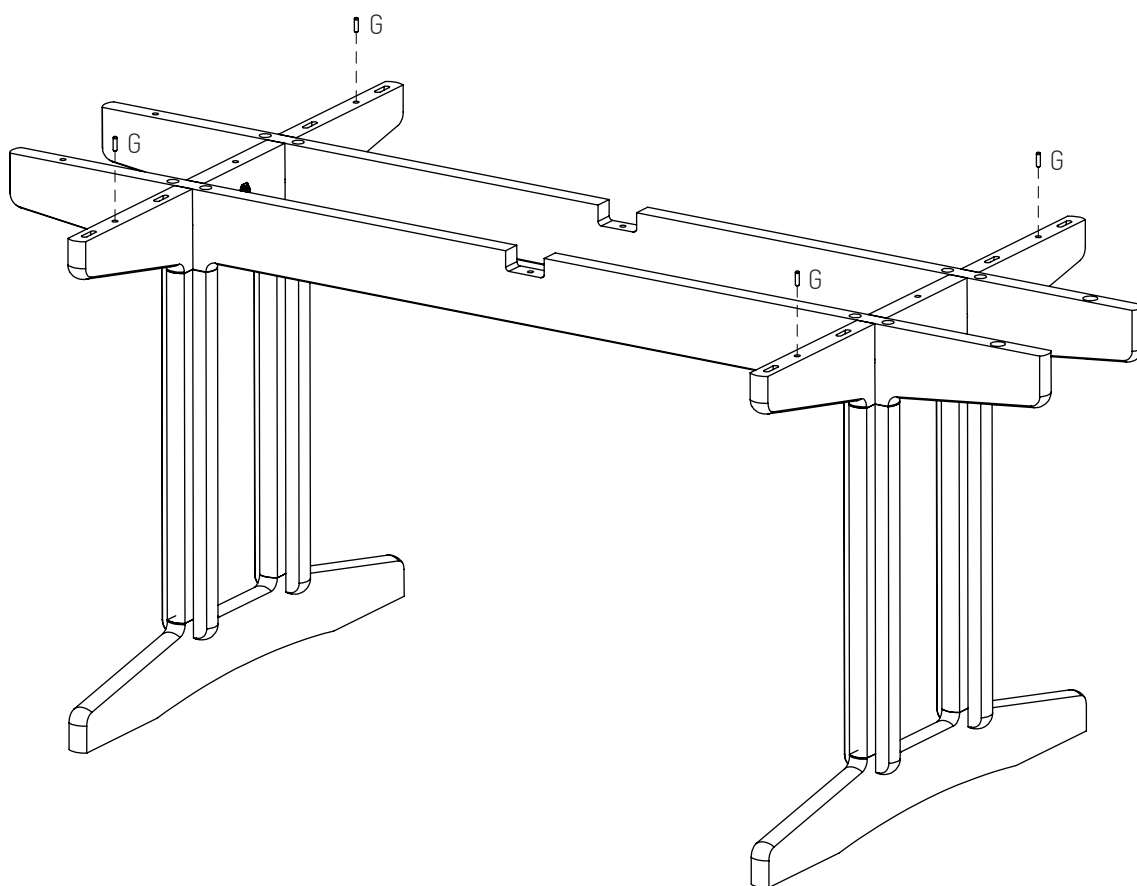



4

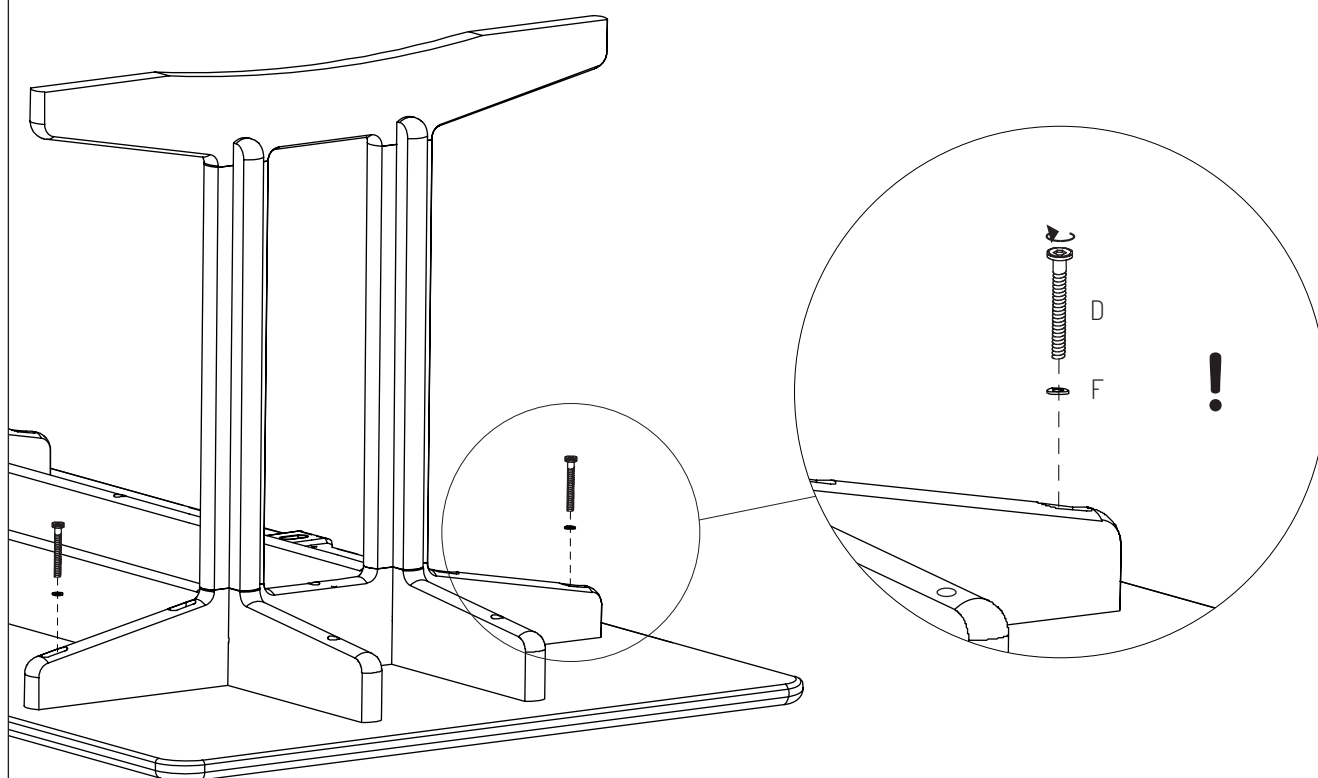 



MÖBLER

  
- A PHILOSOPHY -

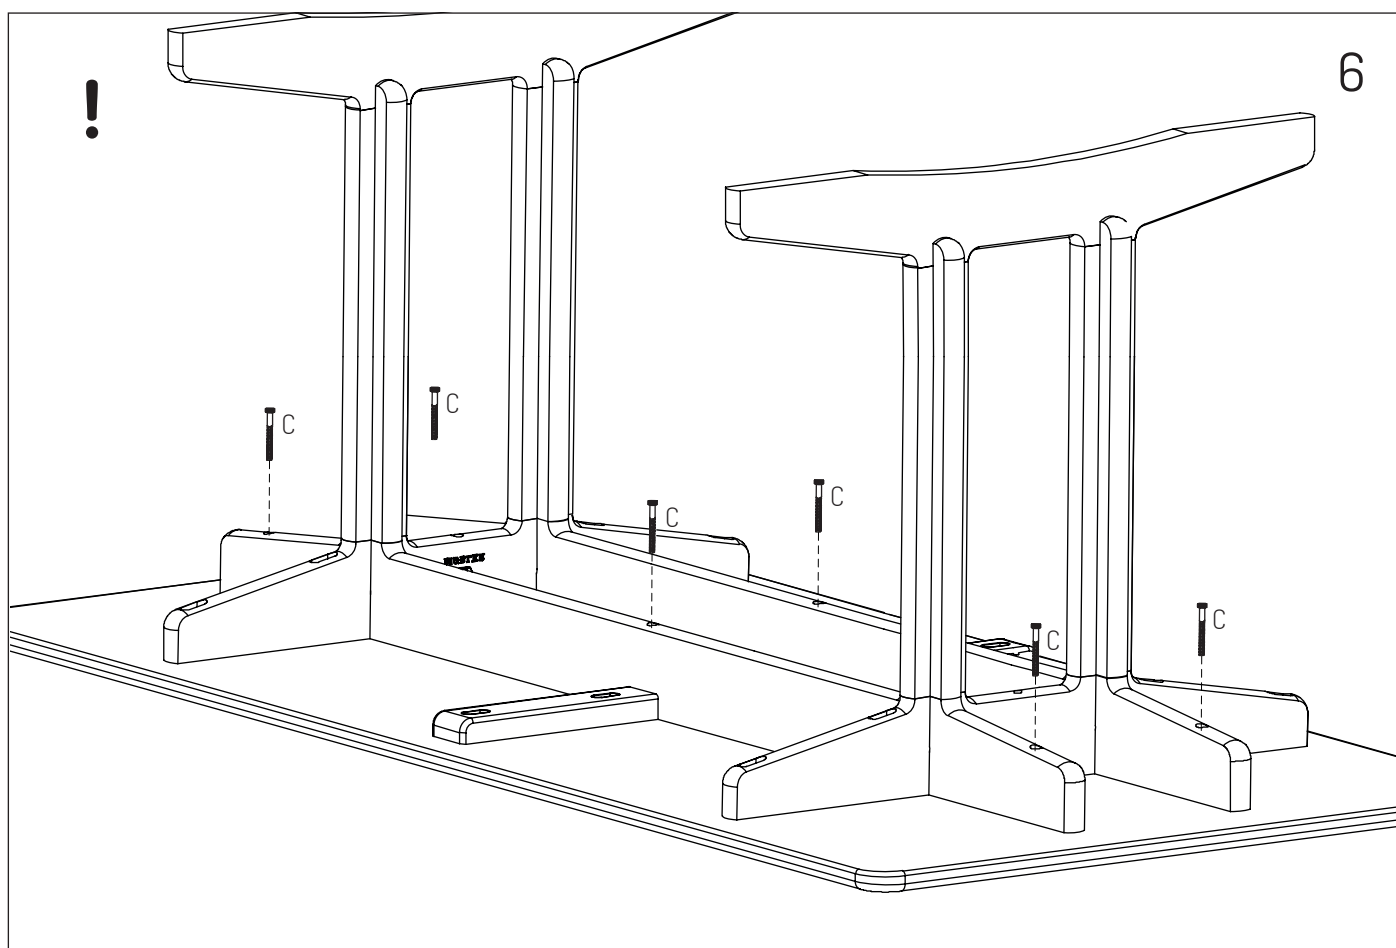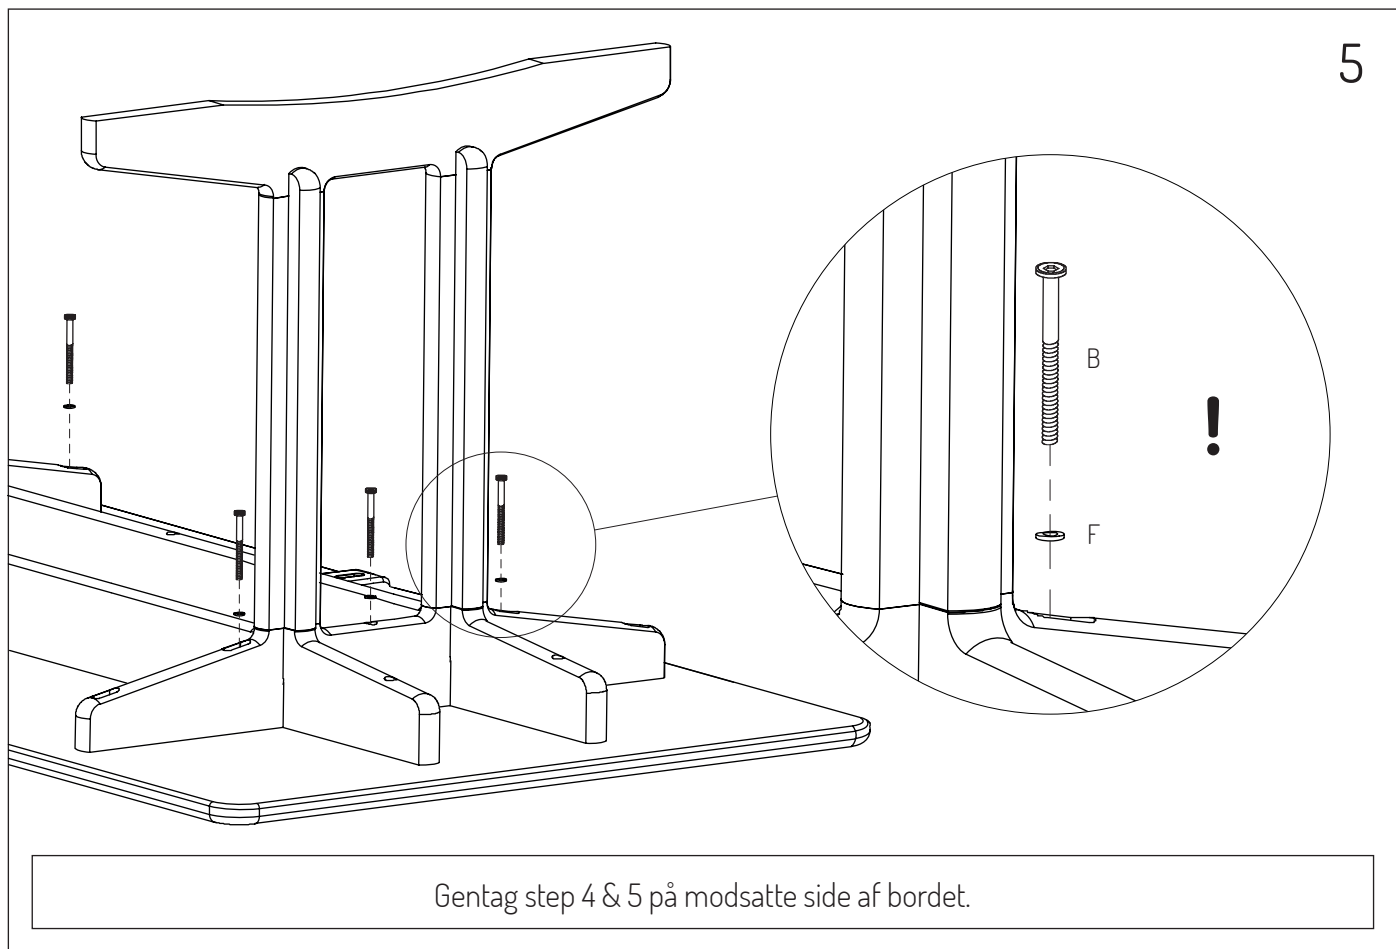



MÖBLER

 - A PHILOSOPHY -

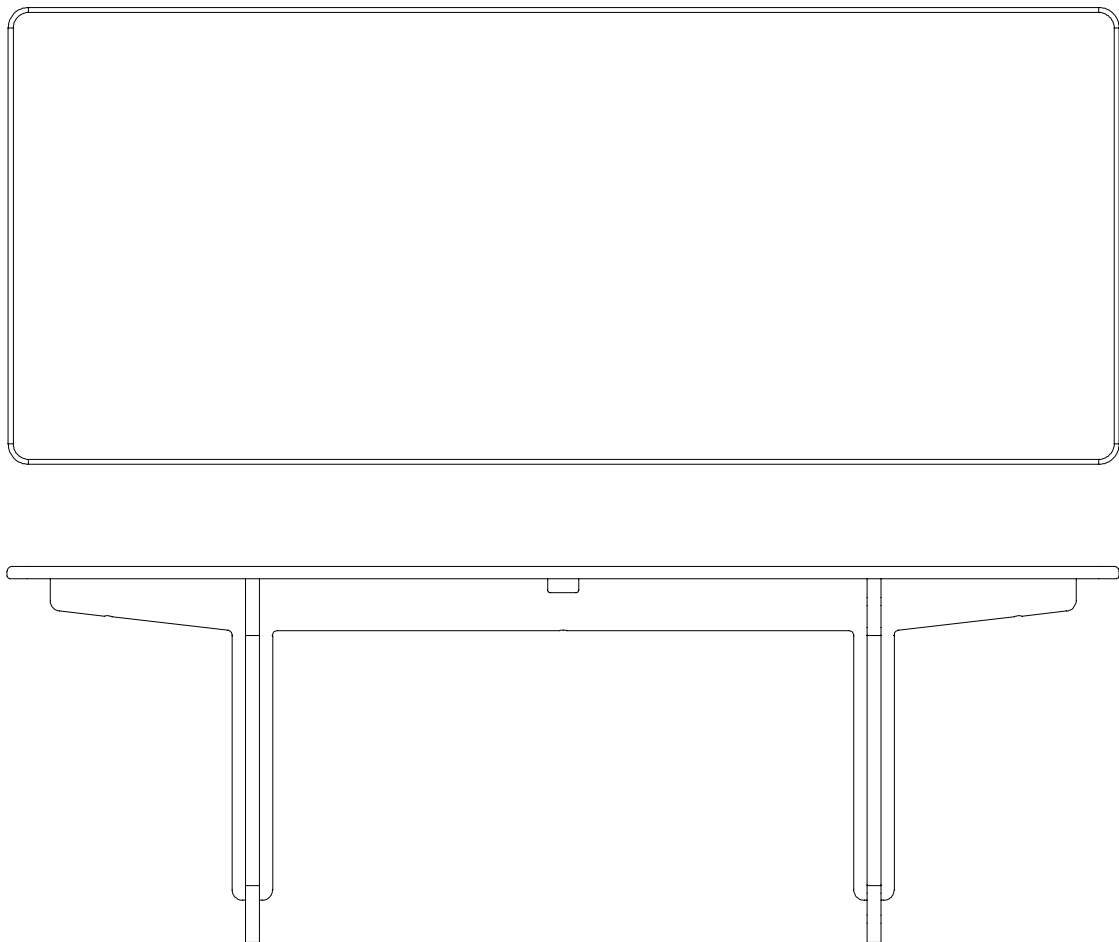

C64 Shaker, Solid

Assembly Instructions



 
MÖBLER

- A PHILOSOPHY -

Content




1

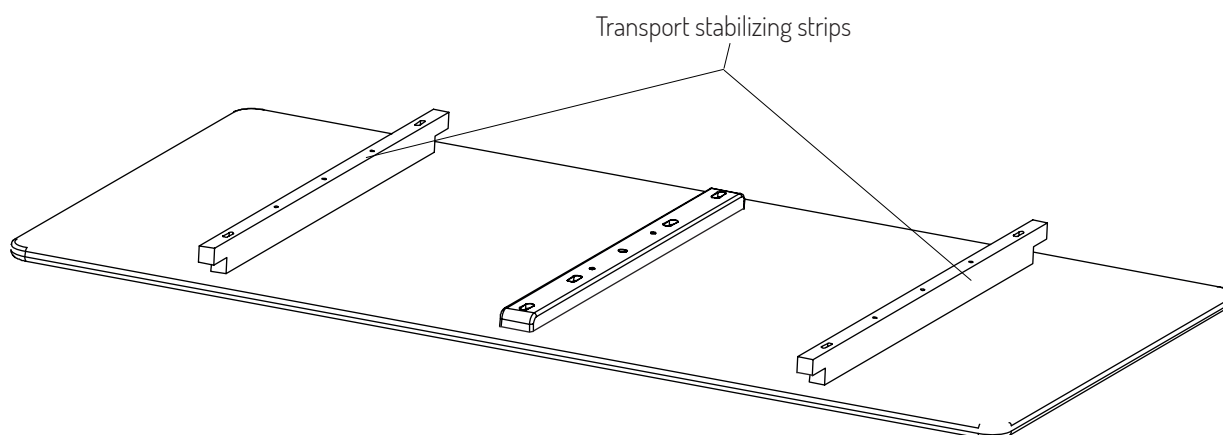

Remove screws (D) from the transport stabilizing strips on the bottom of the tabletop and move the strips away from the table. Keep the screws for later.

2

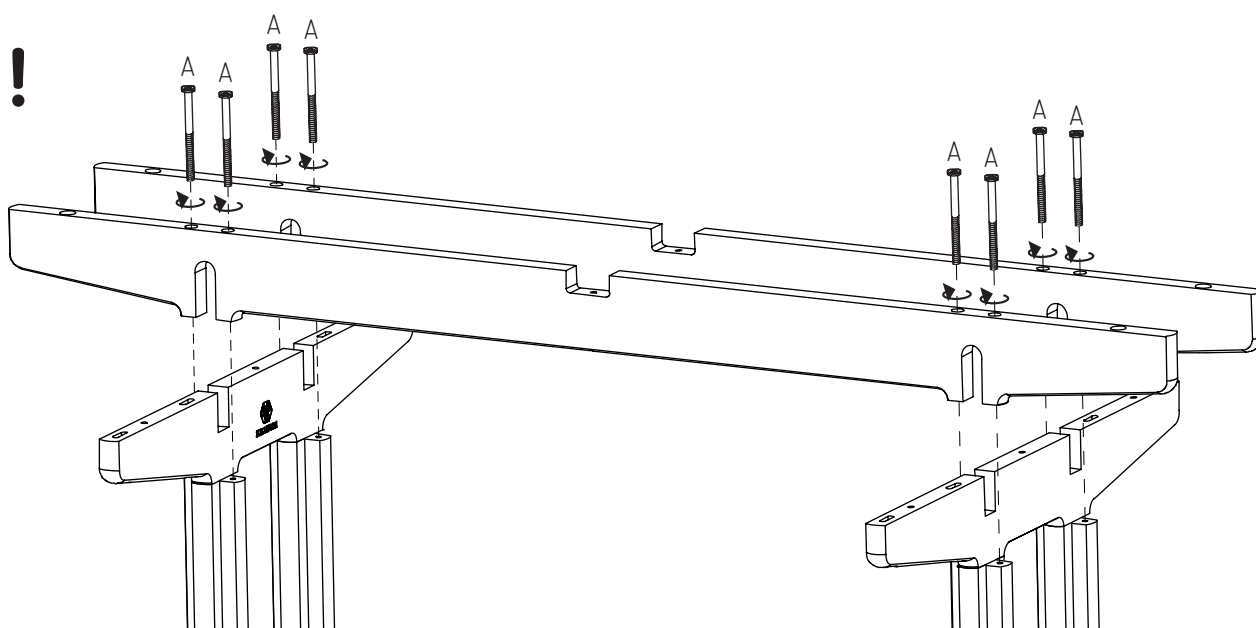

! Attention: Using the wrong length of screws in the wrong places will damage the table. Therefore, please be aware, especially when using power tools.


Remove screws (D) from the transport stabilizing strips on the bottom of the tabletop. Keep the screws for later.




MÖBLER

- A PHILOSOPHY -

3

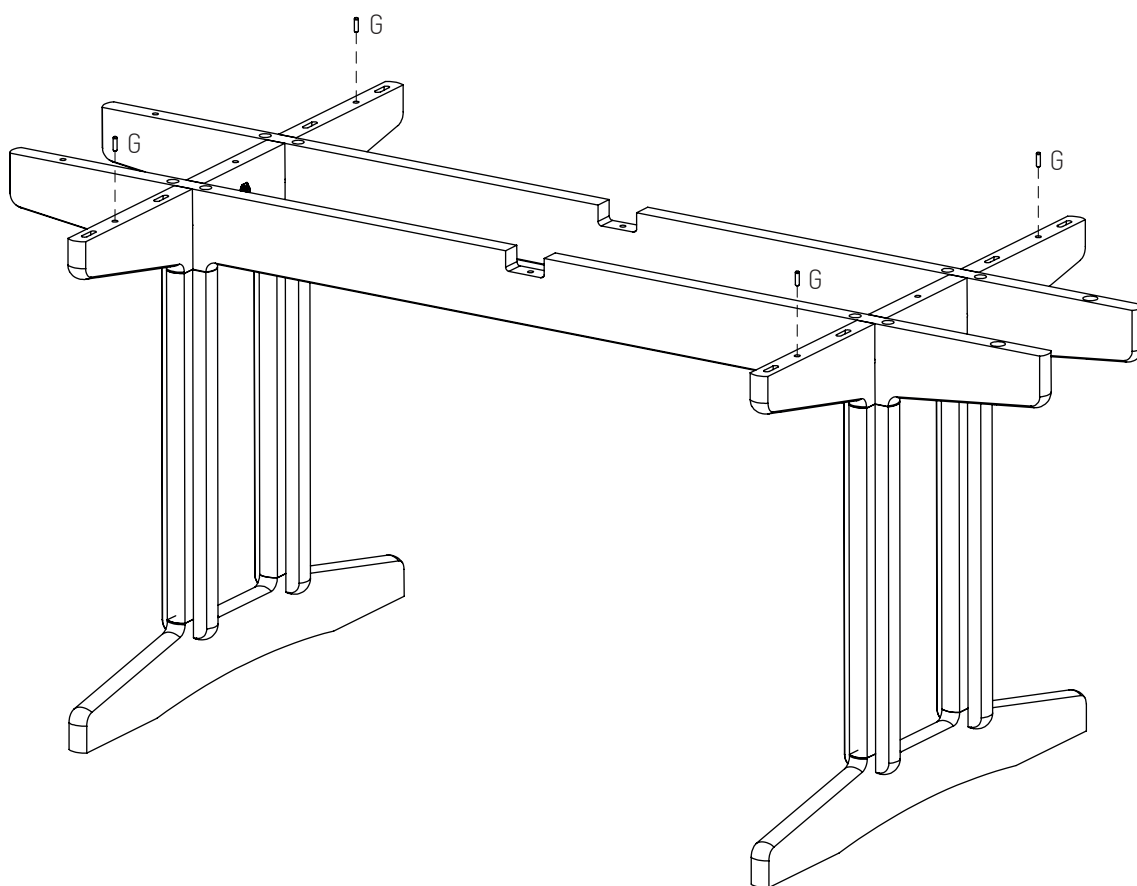

4

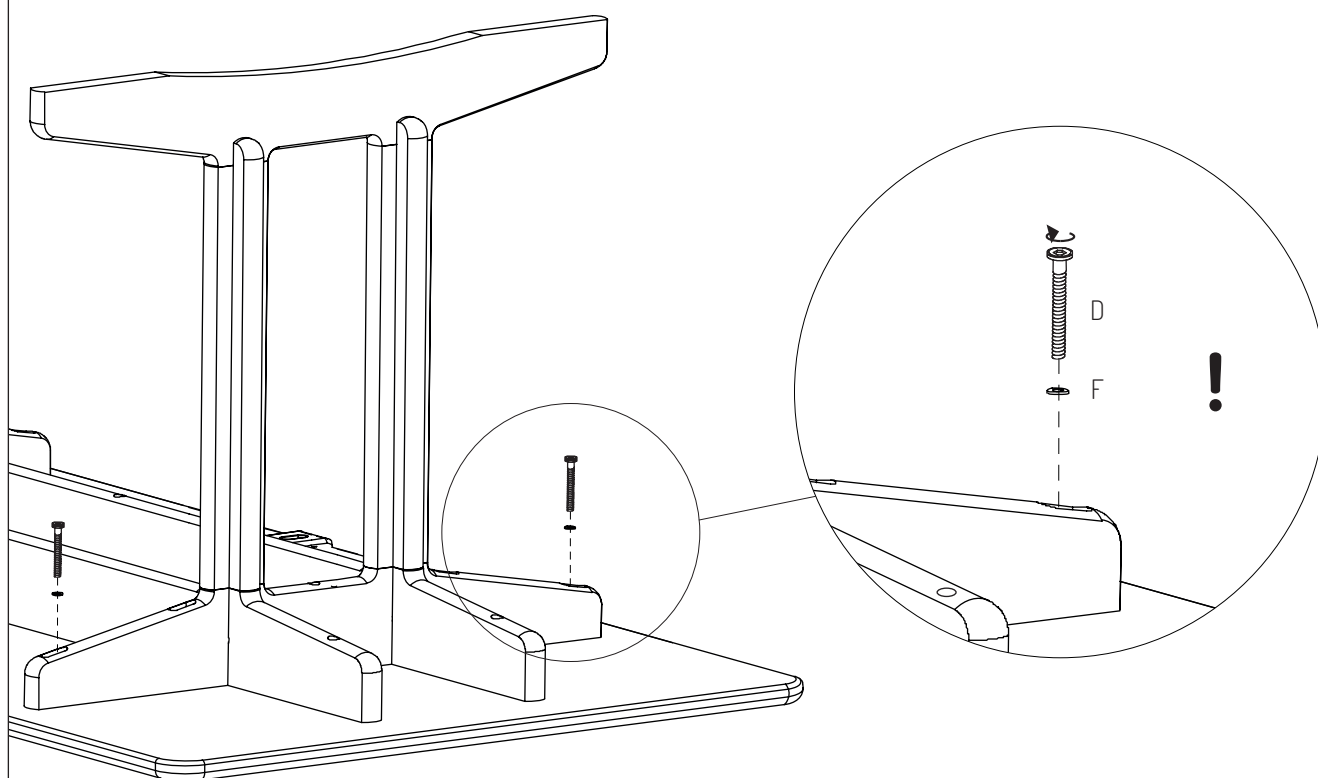 



MÖBLER

- A PHILOSOPHY -

