








## OAK AIR BED - WITH SLATS ASSEMBLY INSTRUCTION FOR BED INSTALLATION

### HARDWARES

 Bolt Connector (4pcs)	 Screw Connector (4pcs)	 Dowel (4pcs)	 L Bracket (8pcs)	 JCBC Screw M6x20 (4pcs)
 Cross Nut (1pc)	 JCBC Screw M6x45 (1pc)	 Screw M5x60 (20pcs)	 Nut M5 (12pcs)	 Washer (12pcs)

### TOOLS

 RUBBER HAMMER (Not included in package)	 SCREWDRIVER (Not included in package)
 WRENCH (Not included in package)	 L KEY (Included in package)

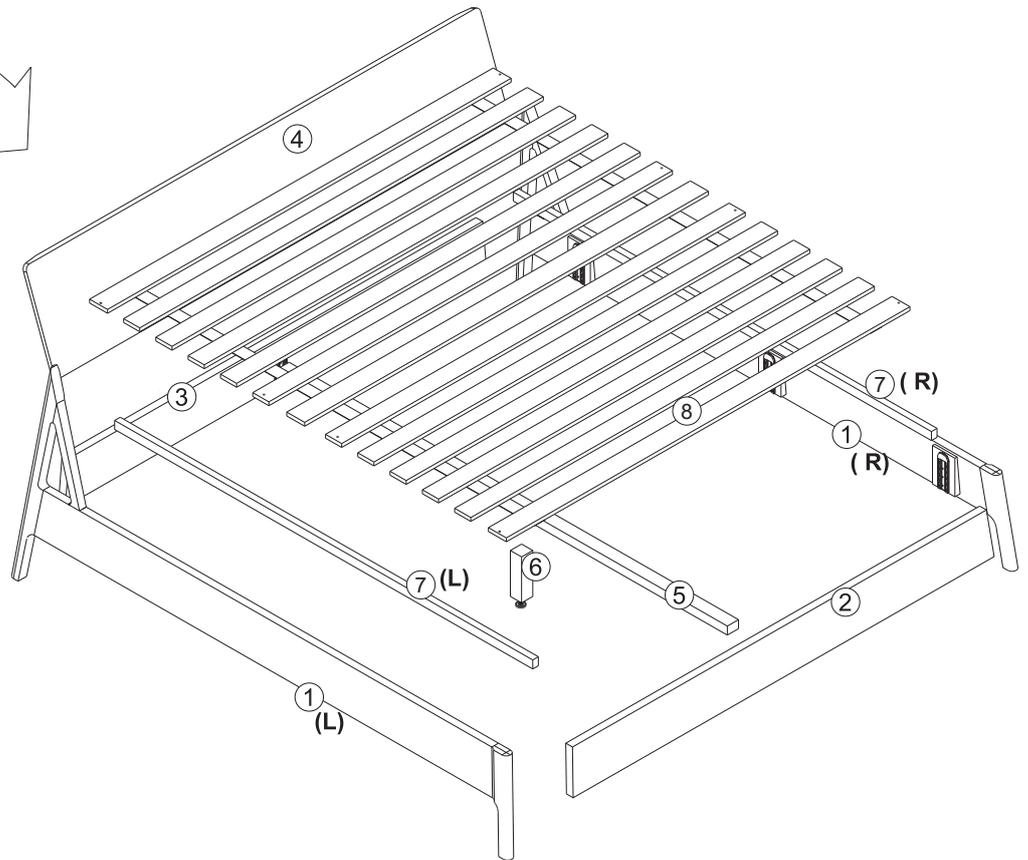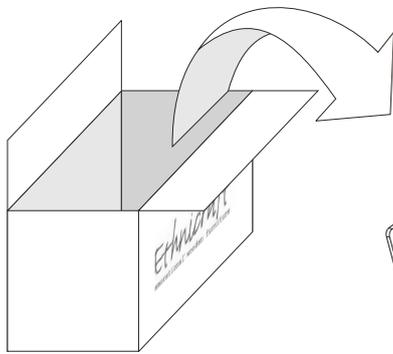


**IN YOUR PACKAGE :**  
ASSEMBLY INSTRUCTION  
HARDWARE (AS LISTED ABOVE)


#### PARTS TO BE INSTALLED

1. SIDERAILS 2pcs
2. FOOTBOARD 1pc
3. HEADBOARD RAIL 1pc
4. HEADBOARD 1pc
5. CENTER SUPPORTS 1pc
6. CENTER LEG 1pc
7. SLATS SUPPORTS 2pcs
8. SLATS 1set


#### NOTICE

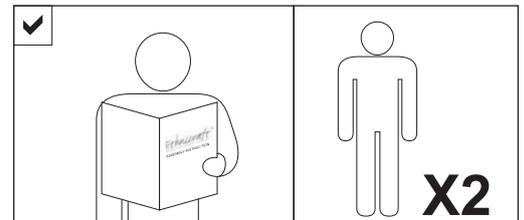

#### SYMBOLS

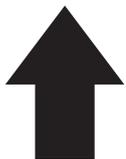

DIRECTION



NUMBER OF  
PERSONS NEEDED



USE WRENCH  
TO TIGHTEN



USE SCREWDRIVER  
TO TIGHTEN



USE L KEY  
TO TIGHTEN




USE RUBBER  
HAMMER





USE HAND

## OAK AIR BED - WITHOUT SLATS ASSEMBLY INSTRUCTION FOR BED INSTALLATION

### A. INSTALLING SIDERAIL + FOOTBOARD + HEADBOARD RAIL

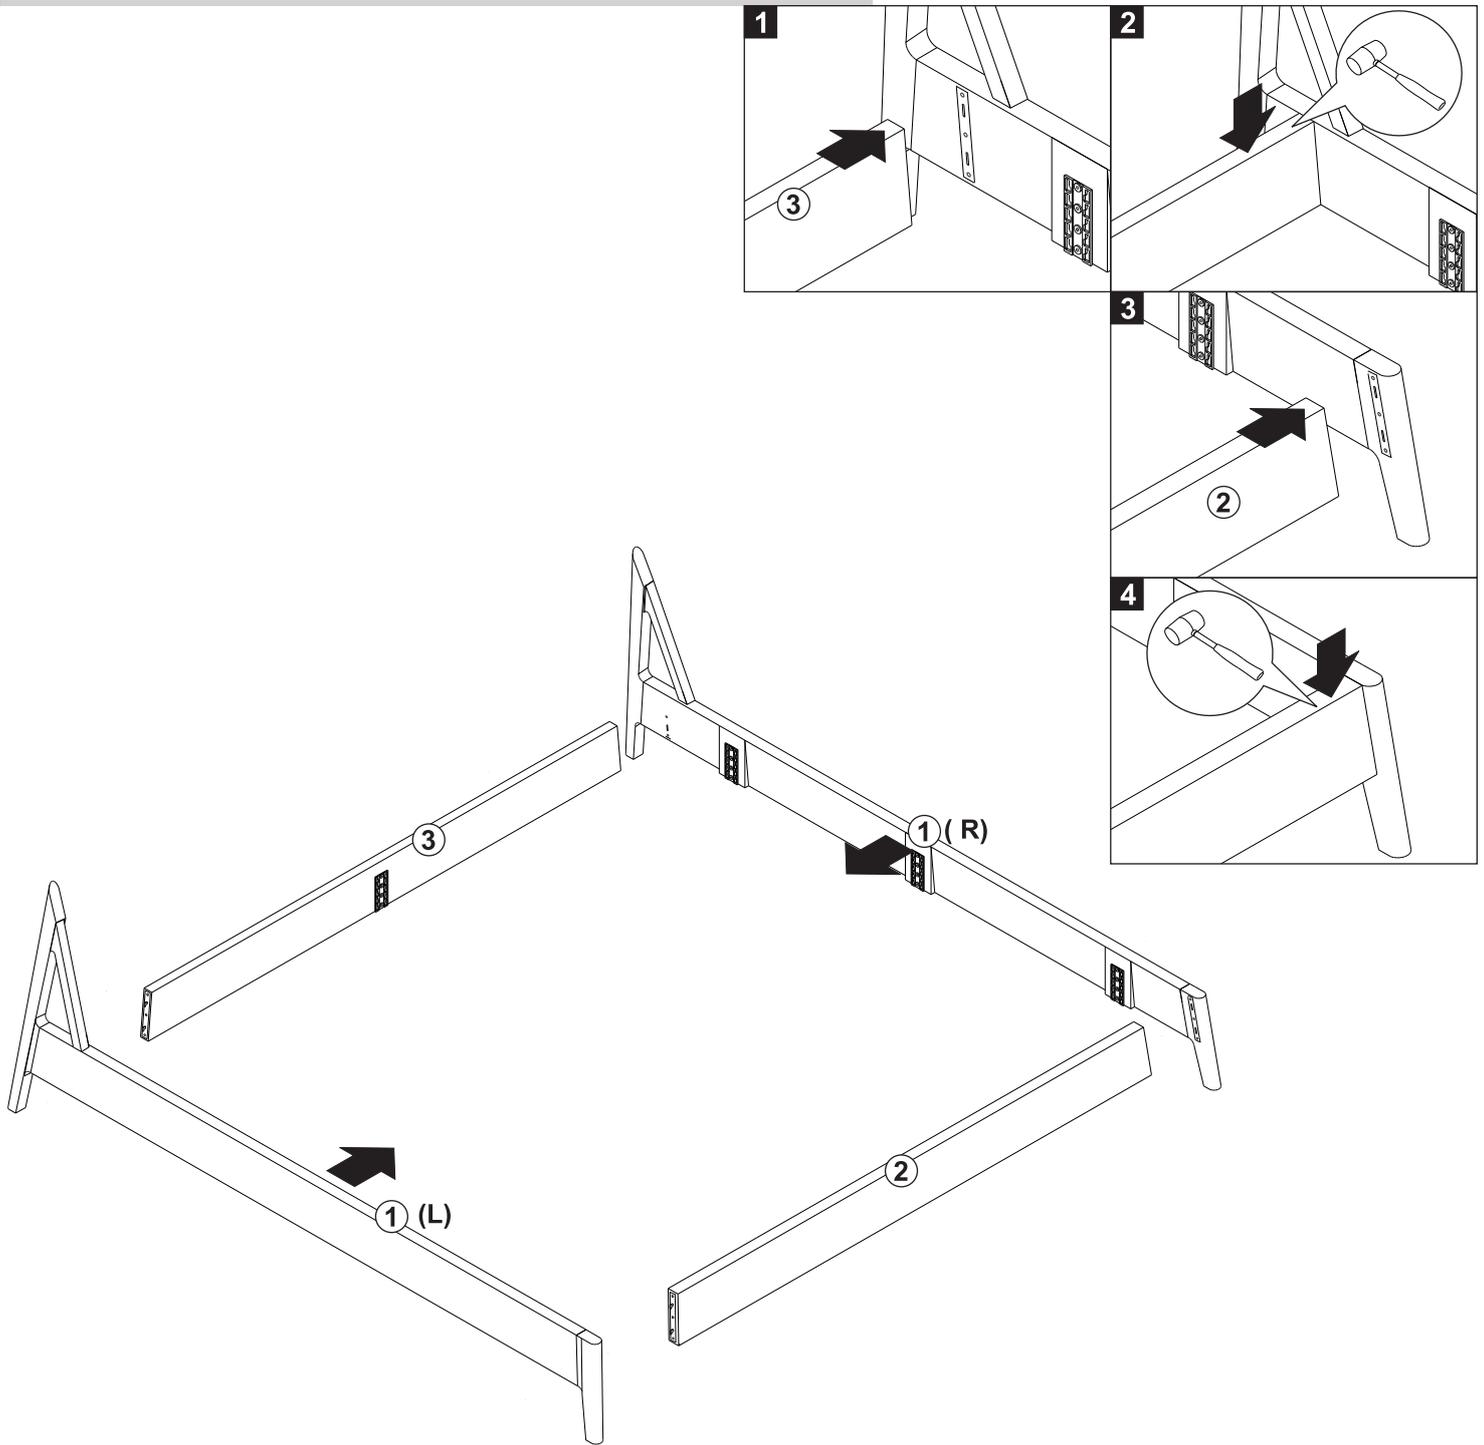



## B. INSTALLING HEADBOARD

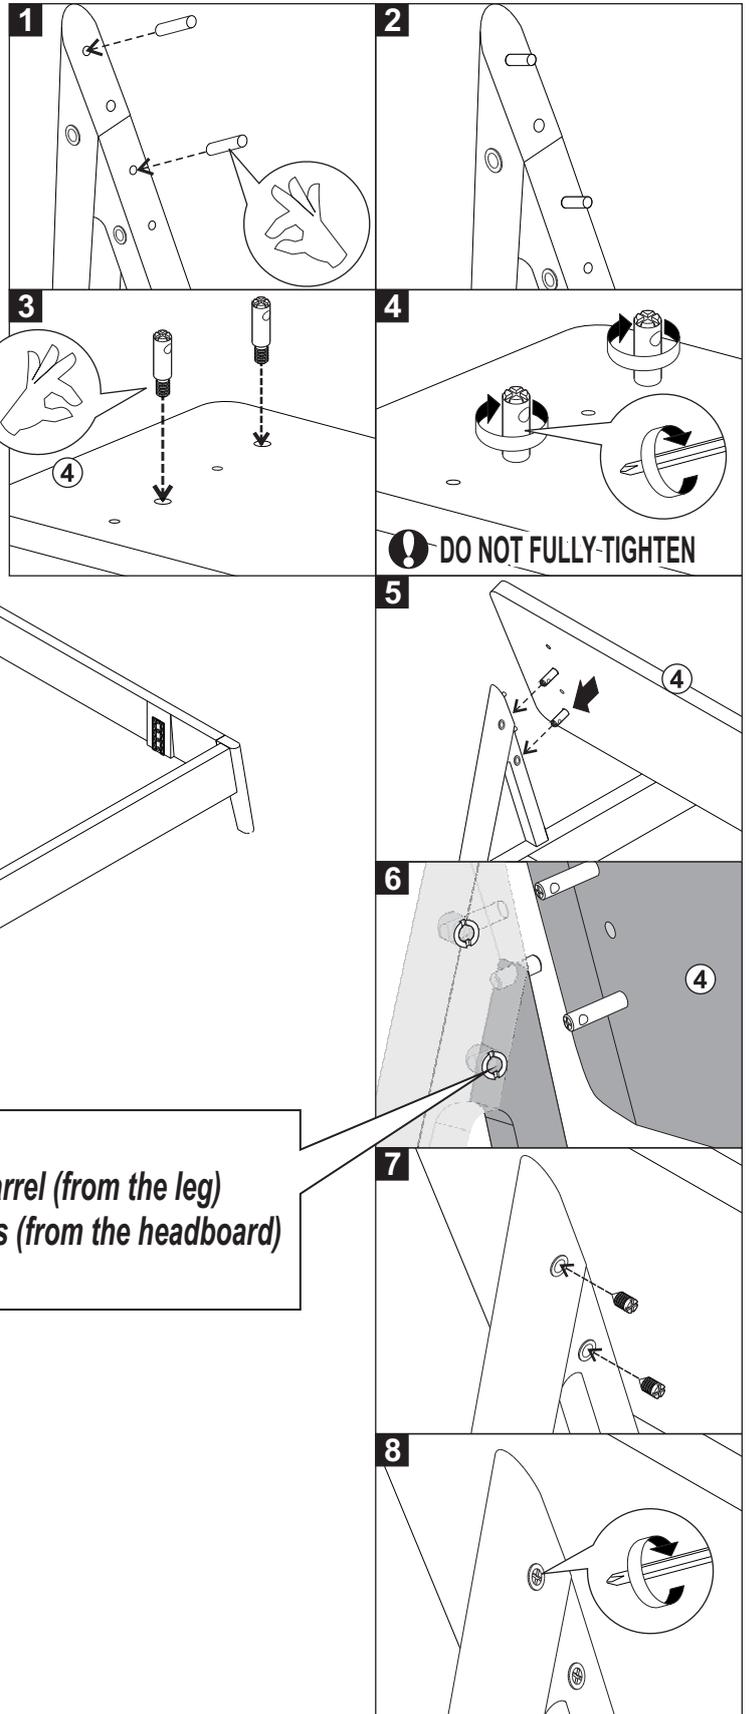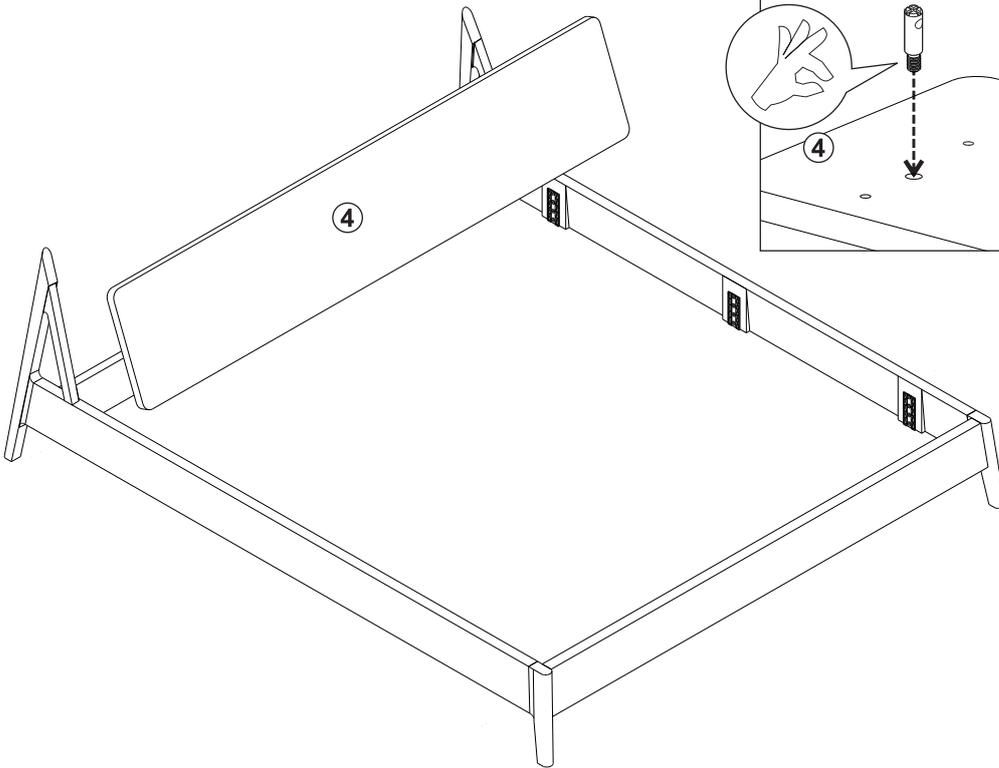



**Note:**  
*Before placing the headboard turn the barrel (from the leg) with a screwdriver so the bolt-connectors (from the headboard) fit into the barrels.*

## OAK AIR BED - WITH SLATS ASSEMBLY INSTRUCTION FOR BED INSTALLATION

### C. INSTALLING MIDDLE SUPPORT & CENTER LEG

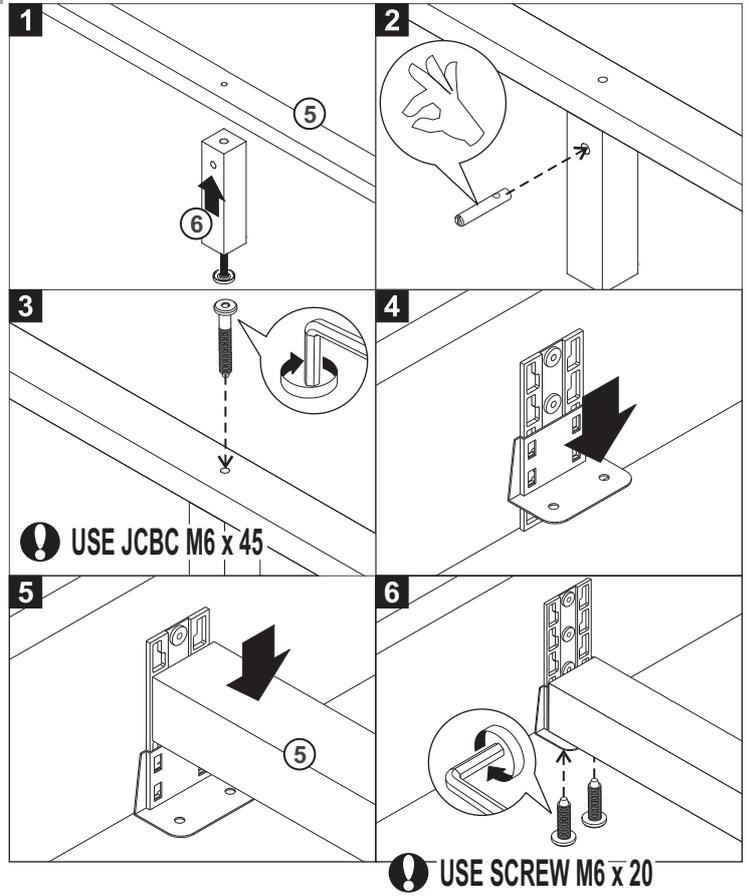
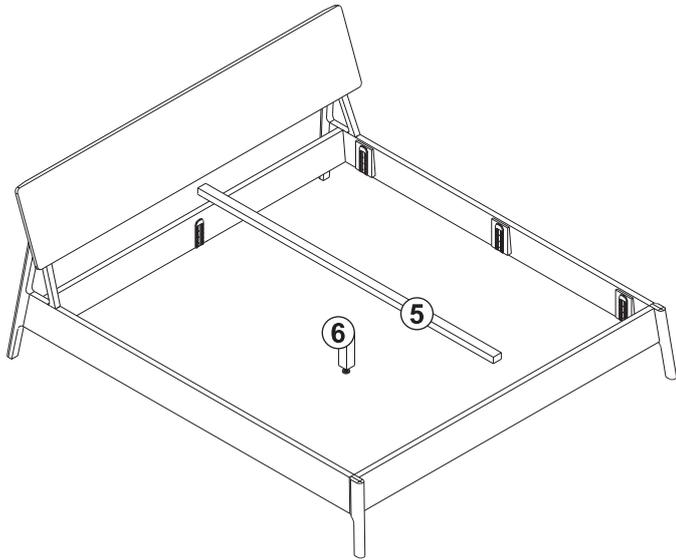


### D. INSTALLING SLATS SUPPORTS

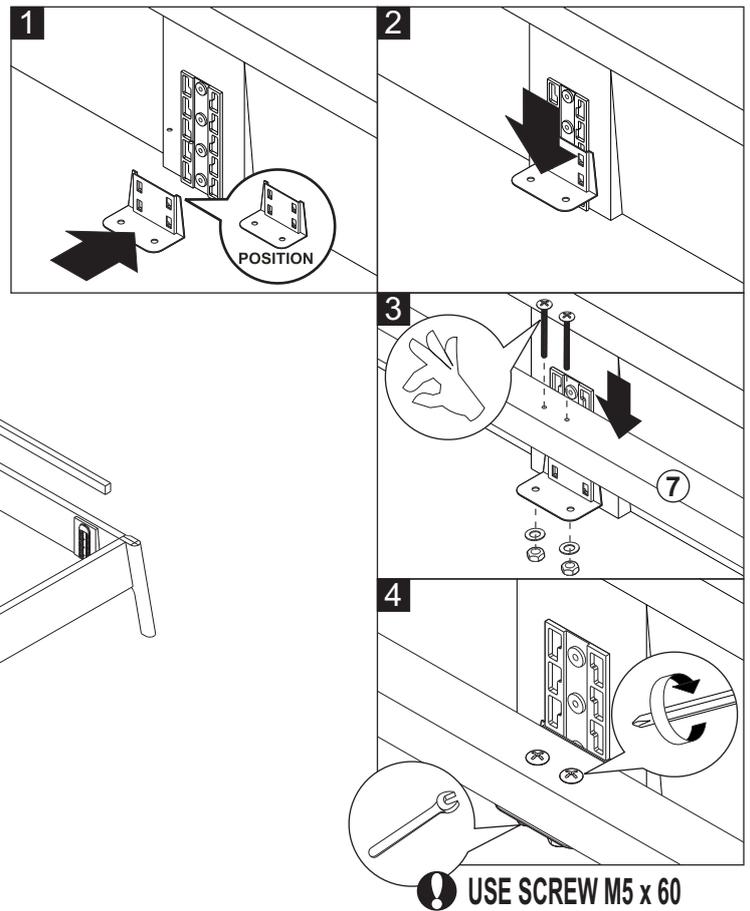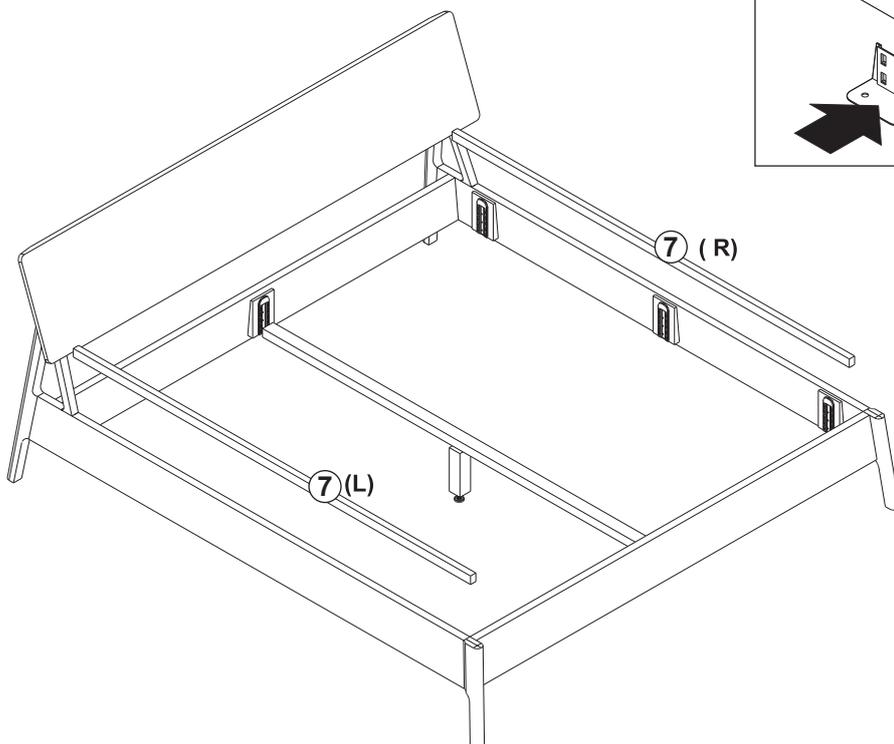

## OAK AIR BED - WITH SLATS ASSEMBLY INSTRUCTION FOR BED INSTALLATION

### E. INSTALLING SLATS

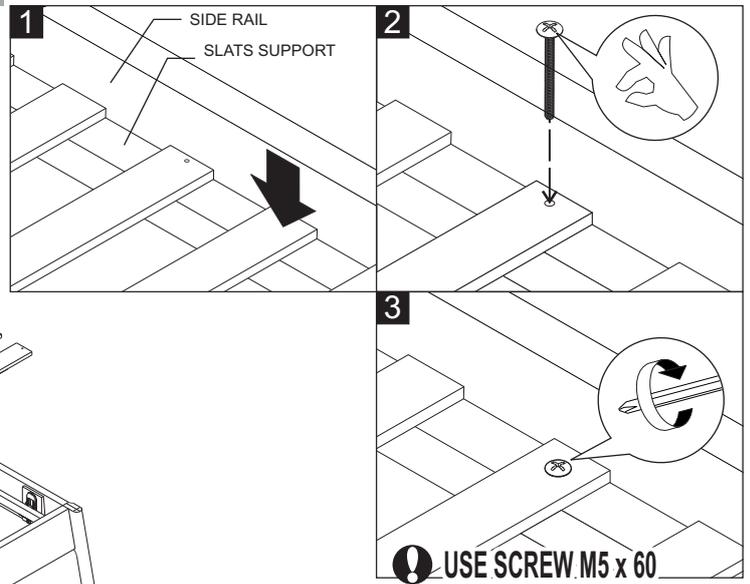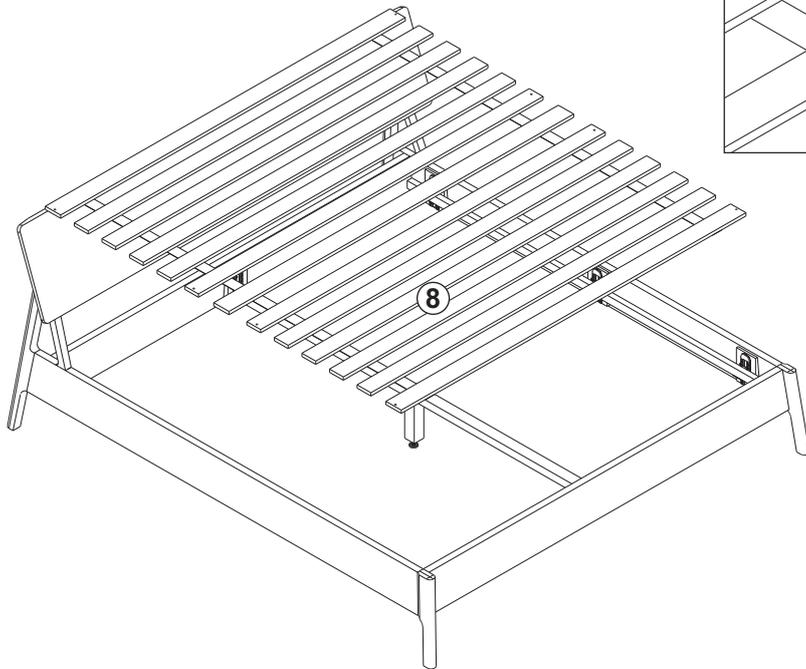

NOTE :  
- SLATS TO BE ASSEMBLED ARE NUMBER 1, 6, 8 AND 13

### F. FINISH

