

Ethnicraft

ASSEMBLY INSTRUCTIONS FOR DINING TABLE INSTALLATION


OAK CORTO DINING TABLE

CODE	DESCRIPTION
50997	OAK CORTO DINING TABLE 150/150/76
50998	OAK CORTO BROWN DINING TABLE - VARNISHED 150/150/76



OAK CORTO DINING TABLE ASSEMBLY INSTRUCTIONS FOR DINING TABLE INSTALLATION

NOTE

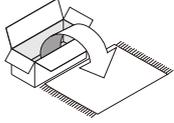


- CAREFULLY OPEN THE CARTON,
- REMOVE CONTENTS AND LAY OUT ON CARPET OR THE PACKAGING CARTON BOX OR OTHER PROTECTIVE SURFACE TO AVOID DAMAGE.
- CHECK PACKAGE CONTENTS TO ASSURE ALL THE NECESSARY HARDWARE AND PARTS ARE RECEIVED UNDAMAGED.
- DO NOT USE DAMAGE OR DEFECTIVE PARTS/HARDWARE.
- CONTACT ETHNICRAFT FOR ANY MISSING PART AND /OR HARDWARE.



- READ THE ASSEMBLY INSTRUCTION BEFORE INSTALLATION AND CAREFULLY FOLLOW THE INSTRUCTION GIVEN.
- SEEK THE ADVICE OF A PROFESSIONAL IF YOU ARE NOT FAMILIAR WITH THESE INSTALLATIONS OR HAVE ANY DOUBTS ABOUT THE SAFETY OF THIS INSTALLATION.




- IT IS ADVISABLE TO DO THIS ASSEMBLY WITH MINIMUM OF 2 PERSONS.



C LEG PART 2 1piece


CODE	DESCRIPTION
P4909	LEG B
P4913	LEG B - BROWN

PARTS TO ASSEMBLE

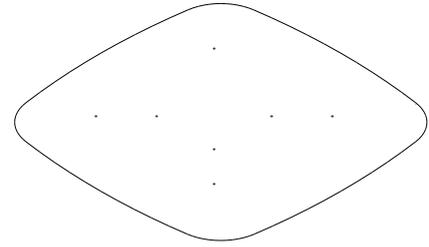


A TABLE TOP 1piece

CODE	DESCRIPTION
P4907	TABLE TOP
P4911	TABLE TOP - BROWN

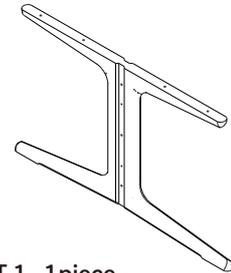

B LEG PART 1 1piece


CODE	DESCRIPTION
P4908	LEG A
P4912	LEG A - BROWN



D LEG PART 3 1piece

CODE	DESCRIPTION
P4910	LEG C
P4914	LEG C - BROWN

HARDWARE ENCLOSED

			
H0824 JCBC SCREW M6x50 (8pcs)	H0689 SPAX SCREW M6x80 (3pcs)	H0849 SPAX SCREW M6x120 (4pcs)	H0638 DOWEL Ø10x30 (4pcs)

TOOLS


(Included in packaged)

	
H0745 L KEY	H0893 TORX KEY

SYMBOLS



DIRECTION




NUMBER OF
PERSONS NEEDED



USE HAND



USE L KEY
TO TIGHTEN

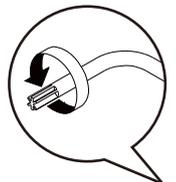



USE TORX KEY
TO TIGHTEN

OAK CORTO DINING TABLE

ASSEMBLY INSTRUCTIONS FOR DINING TABLE INSTALLATION



A INSTALLING LEGS

1ST STEP

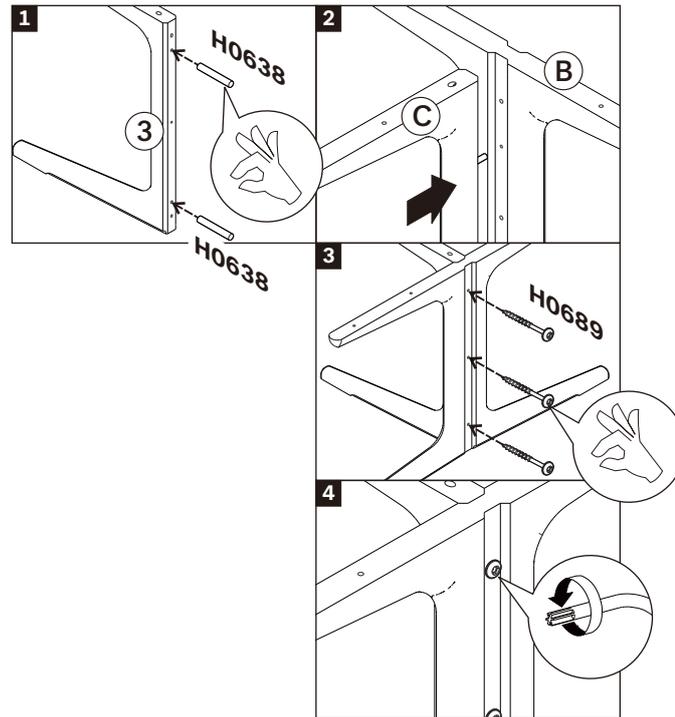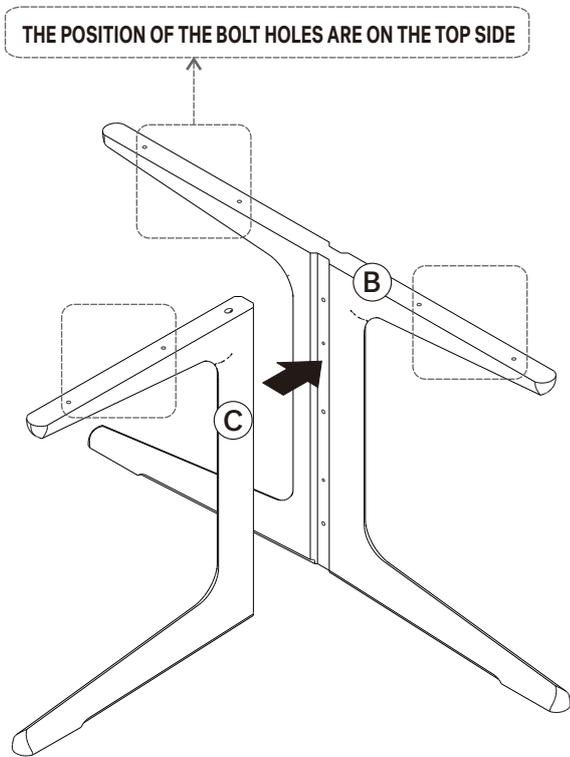

- ! -USE DOWEL Ø10x30 (2X)
- USE SPAX SCREW M6x80 (3X)
- TIGHTEN FULLY

2ND STEP

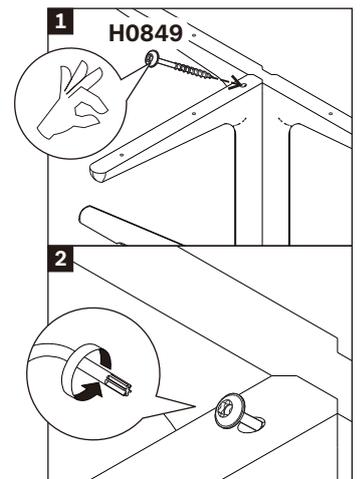
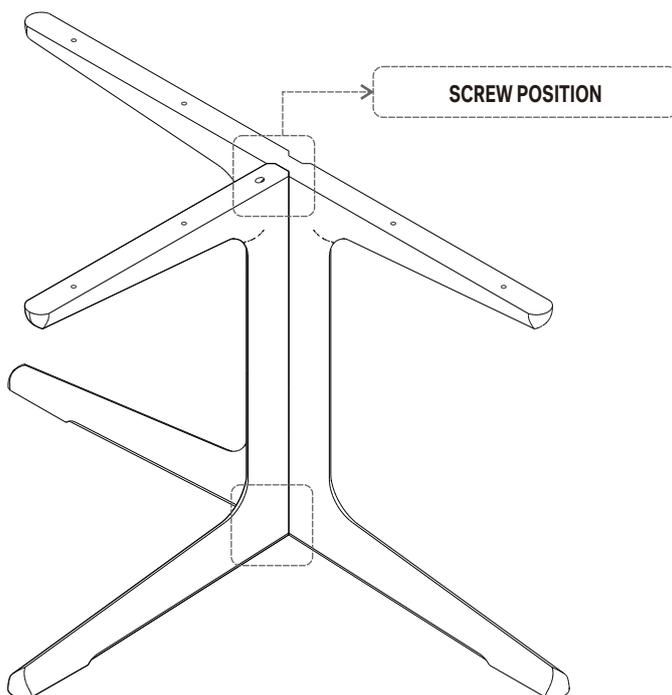


- ! - USE SPAX SCREW M6x120 (2X)
- TIGHTEN FULLY

OAK CORTO DINING TABLE



ASSEMBLY INSTRUCTIONS FOR DINING TABLE INSTALLATION

3RD STEP

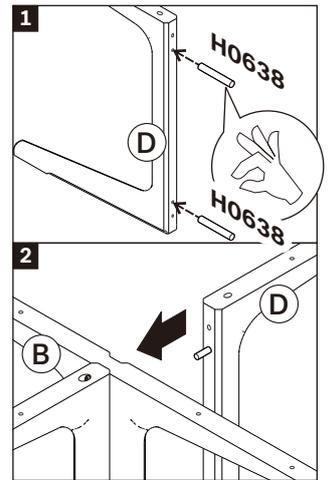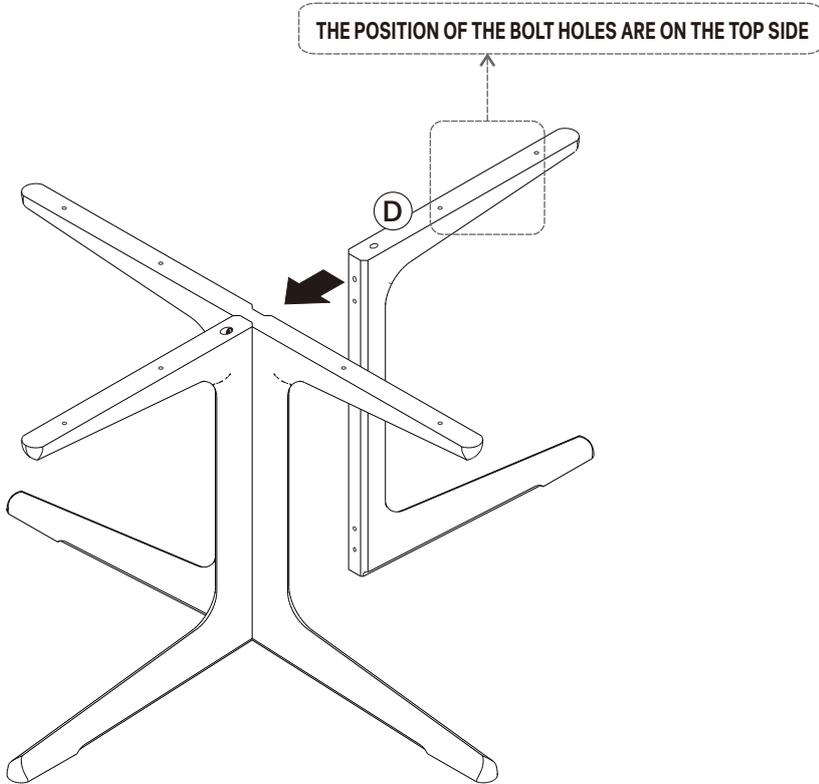

! USE DOWEL Ø10x30 (2X)

4TH STEP

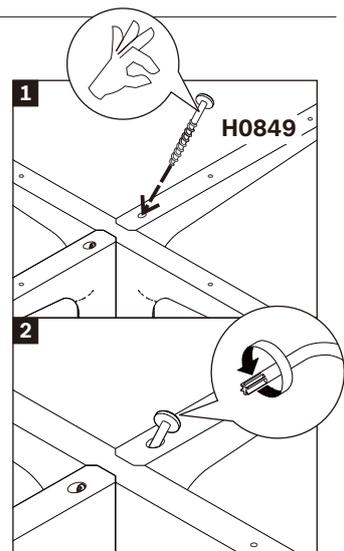
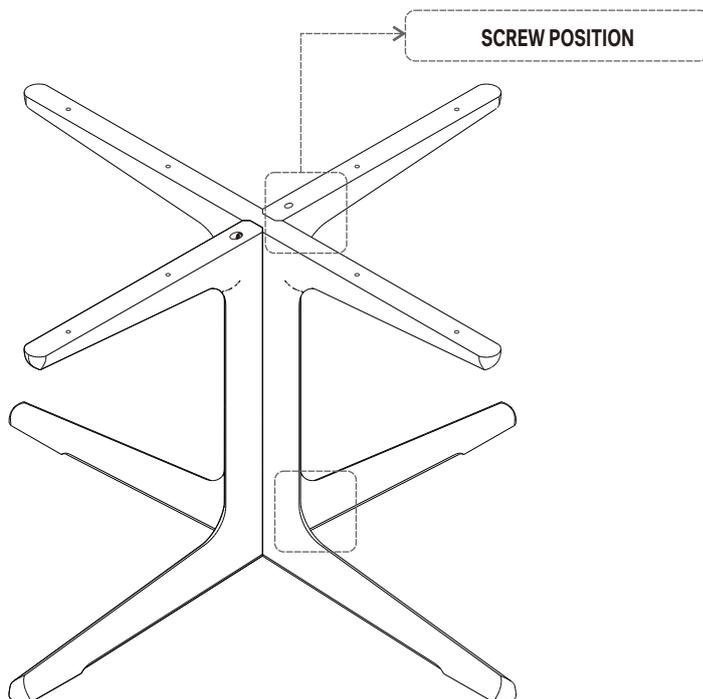


! - USE SPAX SCREW M6x120 (2X)
- TIGHTEN FULLY

OAK CORTO DINING TABLE




ASSEMBLY INSTRUCTIONS FOR DINING TABLE INSTALLATION

B INSTALLING LEGS TO TABLE TOP

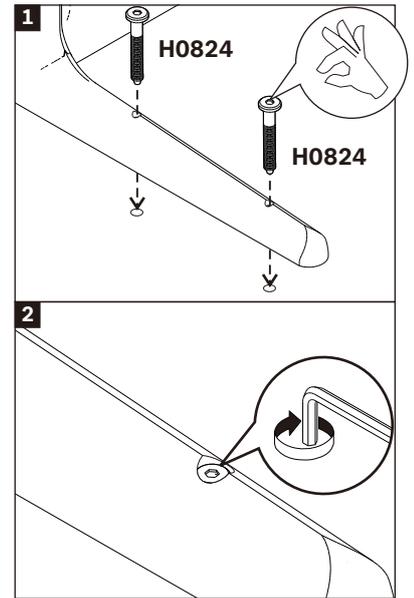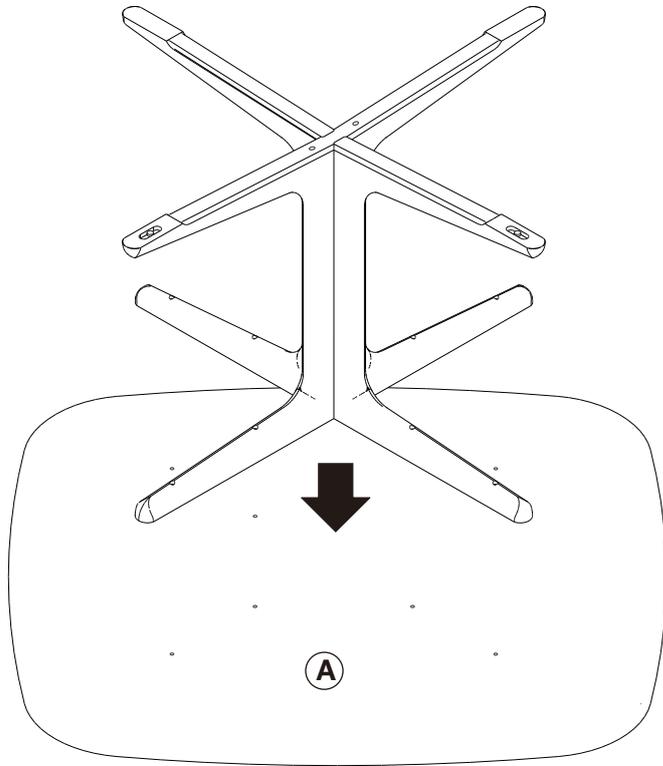

- ! - USE JCBC SCREW M6x50 (8X)
- TIGHTEN FULLY

C ADJUSTING SHOES

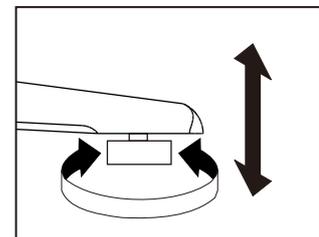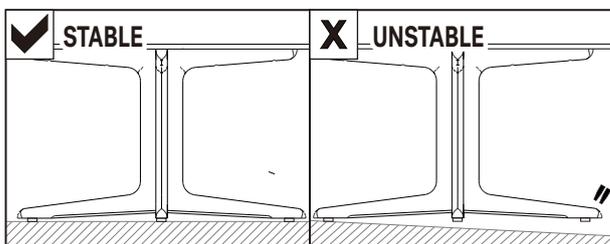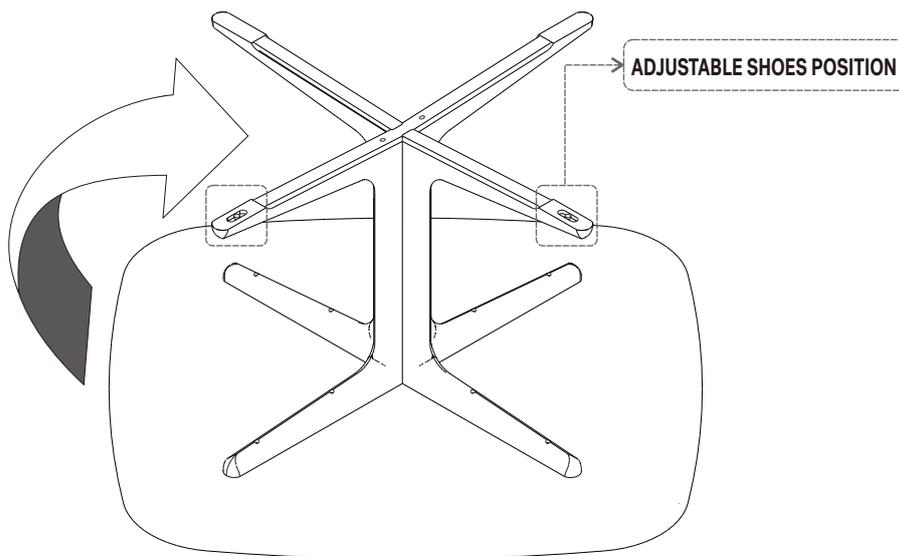

NOTE :
THIS IS A COMPULSORY ACTION TO MAKE SURE ALL OF THE ADJUSTABLE SHOES TOUCH THE GROUND!